



## VIPP9 CLEANING & MAINTENANCE

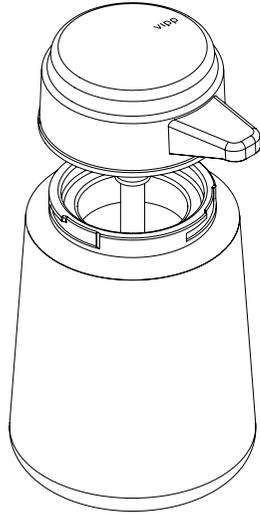

vipp.com

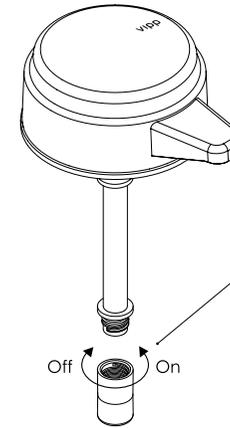

**In case of a malfunctioning pump**  
The valve in pump can clog if left unused.


Screw of valve and clean in lukewarm water. Reassemble and start pumping.

### Care instructions for powder-coated surfaces

Keep powder-coated surfaces clean and dry. Use a lint-free cleaning cloth or a soft brush with warm water and a mild detergent. This applies to both smooth and rough surfaces.

### Lime stains on the black (rough) surface

Use a mild descaler suitable for painted surfaces. Use a lint-free cleaning cloth. Rinse with clean water and finally dry the product.

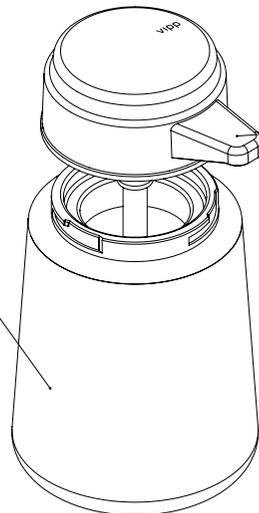

Dismount pump from body and clean parts separately.

### Care of stainless steel

Keep stainless steel clean and dry. Stainless steel may be permanently stained if cleaning products or soap residue are not removed relatively quickly.

We recommend the use of a care product for stainless steel to make the surface water and dirt repellent. This makes the daily cleaning with a damp lint-free cleaning cloth a lot easier.

Do not use chlorine or abrasive cleaners as this may damage the surface.

If the above instructions are followed, the stainless steel surface remains beautiful for many years.

### Stubborn stains and rust on stainless steel

Stubborn stains and rust may be removed by using a light-abrasive cleaner suitable for stainless steel.

Cleaning must follow the structure of the polished surface. Please note that this process can change the original polishing of the surface.